


PondGard Installation Detail 9-

Creating a Seam with 6" Quickseam Cover Strip Tape



Step 1- Ensure the liner is dry and free of mud or other contaminants.

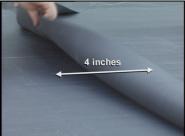

Step 2- Overlap the adjacent PondGard panels by a minimum of 4". Allow the PondGard panels to relax for 15 minutes.



Step 3- Using a scrubber pad and holder; apply the QuickPrime Plus primer to the top surfaces of the adjacent PondGard panels covering a minimum of 4" on both sides of the overlap edge.



Step 4- Test the primer flash-off by touching the primed area with your finger and pushing forward at an angle. The primer should not string as your finger is moved up and away.




<u>Step 5</u>- Install the QuickSeam Cover Strip by using both thumbs in the core and rolling the tape away from your body. As you move forward, peel away the release paper and place it under your knee.



PondGard Installation Detail 9 (continued)-

Creating a Seam with 6" Quickseam Cover Strip Tape

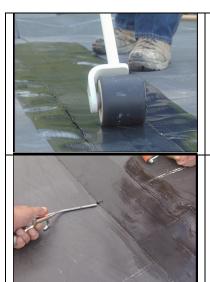

Step 6- Using either a hand or stand-up roller; roll the seam longitudinally and across the seam in overlapping sections to mate the seam together.

Step 7- Using a compressed air source, test all bonded seams using a minimum 50 p.s.i. air supply directed through a 3/16" nozzle held within 2"of the seam edge.

Note: Do not exceed 75 p.s.i. or it may cause damage to the seam.

This Detail featured these Firestone Specialty Products:

Item

PondGard EPDM Rubber Membrane

- 6" QuickSeam Cover Strip tape
- QuickPrime Plus Primer
- QuickScrubber
- · QuickScrubber Plus
- Hand roller
- Quick Roller

Part Number(s)

Varies by Size

W56RAC1693 or W56RAC1616

W563587041 or W563587044

W563582045

W563582049

W563582023

W563582026